



BRUKERMANUAL

ELIT IR35



Profesjonell IR måler
WWW.ELIT.NO

Sikkerhetsinformasjon:

Les følgende for å forhindre øye- og personskade:

1. Ikke lys på personer eller dyr med laseren.
2. Ikke se direkte på laserlyset, heller ikke via andre optiske enheter (kikkert, teleskoper osv.)
3. Hvis batterisymbol vises. Skifte batteri umiddelbart for å sikre korrekt måling.
4. Ikke benytt produktet hvis kapslingen er skadet.
5. Ta høyde for emissiviteten på objektet som måles, for å hindre målefeil. Se tabell sist i manual.
6. Må ikke brukes i eksplosjonsfarlig område.
7. For å sikre korrekt målenøyaktighet ha instrumentet i romtemperatur i 30 min før måling.
8. Ikke oppbevar instrumentet over lang tid i høy temperatur.

Instruksjoner for bruk:

Manuell måling: Trykk og hold inne avtrekker-knappen ved pekefingeren. SCAN vil vises i displayet og temperatur vil måles kontinuerlig. Slipp avtrekkeren for å stoppe måling, HOLD vil nå vises i display og måleverdi fryses. Instrumentet skru seg av etter 8 sekunder.

Kontinuerlig måling: Trykk på SET knappen for å komme inn i oppsetmeny. Trykk flere ganger på SET til hengelås-symbolet vises, trykk pil opp så ON vises i displayet. Trykk så på avtrekkeren. Kontinuerlig måling er nå aktivisert og SCAN blinker i displayet sammen med måleverdi i hoved-display. Trykk en gang til på avtrekkeren for å stoppe målingen.

MAX/MIN/AVG/DIF verdier: Trykk på MODE knappen for å endre visning på sekundær-displayet nede til høyere. MAX vil vise høyeste målte verdi i aktive målesyklus, MIN vil vise minste målte verdi. AVG vil vise gjennomsnittstemperaturen i målesyklusen. DIF vil vise forskjellen mellom høyeste og laveste verdi i målesyklusen.

Høy og lav alarm: Trykk på HI/LO knappen. HiLo vil nå vises i toppen av displayet. Instrumentet vil varsle for både overskredet høy (rød diode) og lav (blå diode) alarm. Trykk en gang til på HI/LO knappen, da vil kun høy alarm varsles. Ett nytt trykk på HI/LO vil kun gi LO i displayet og kun varsle ved lav alarm. Ett fjerde trykk på HI/LO knappen vil skru av varling ved overskredet grense. Oppsett av alarmer gjøres ved å trykke på SET knappen til HI eller LO vises i displayet, juster opp eller ned med piltaster og bekreft verdi med avtrekkeren.

Emissivitet (kun ELIT IR35): Trykk på SET knappen til ϵ 0,95 vises i nederste hjørne, trykk så opp eller ned for å justere til ønsket verdi. Kort trykk på piltaster justerer 0,01 og lang trykk 0,1. Se tabell senere i manualen for forskjellige materialer.

Laser AV/PÅ og valg av måleenhet C/F kan også gjøres i menyen ved å trykke på SET.

ELIT IR35/ IR35B

Professional Infrared Thermometer User Manual

Overview

ELIT IR35 series professional non-contact infrared thermometer can determine surface temperature through measuring infrared energy radiated by the target surface.

Safety Instructions

⚠ Warning:

To avoid eyes or personal injury, please read the following safety instructions before using this product:

- Please do not irradiate people or animals with laser directly or indirectly.
- Please do not look at the laser directly or through other optical tools (telescope, microscope, etc).
- Before using the product, if battery symbol on LCD display is flashing, replace batteries at immediately to avoid inaccurate measurements.
- Before using the product, check the product for damages. If the surface has cracks or lacks rubber parts, do not use the product.
- Please refer to the radiation coefficient (emissivity chart at the end of the manual) to get the actual temperature. Reflective objects will cause the measured value to be lower than the actual temperature value. When measuring these objects, please be aware not to touch high temperature surfaces.
- Do not use this product in explosive gas and steam environment.
- To ensure measurement accuracy, place this product in test environment temperature for more than 30 minutes before using it.
- Avoid keeping the thermometer near high temperature objects for a long time.

Specifications

Functions	ELIT IR35B	ELIT IR35
Measurement Range	-35°C~450°C (-31°F~842°F)	-35°C~650°C (-31°F~1202°F)
Accuracy	≥0°C: ±1.8°C or ±1.8% of reading, whichever greater.< 0°C: ±(1.8°C+0.1°C/°C)	≥32°F: ±3.6°F or ±1.8% of reading, whichever greater.< 32°F: ±(3.6°F+0.1°F/°F)
Calibration Temperature Range	21°C~25°C (70°F~77°F)	
Temperature Coefficient	0.1°C/°C (0.1°F/°F) or ±0.1% of reading per degree, whichever greater	
D-S Ratio	10:1 (calculated when energy is 90%)	12:1 (calculated when energy is 90%)
Emissivity	0.95	0.1~1.0 adjustable
Response Time	250ms (95% of reading)	
Spectral Response	8um~14um	
Display Resolution	0.1°C (0.1°F)	
Repeatability	±1.0°C (1.8°F) or 0.8% of reading, whichever greater.	
Laser Quantity	Single Laser	Dual Laser
Laser Type	CLASS II	
Laser Wavelength	630nm~670nm	
Laser Power	<1mW	
Battery Type	9V Battery (6F22)	
Battery Life	≥12h (Work continuously with backlight on)	≥10h (Work continuously with backlight on)
Product Size	189mm*118mm*55mm	
Weight	292g	
Operating Temperature	0°C~50°C (32°F~104°F)	
Storage Temperature	-20°C~60°C (-4°F~140°F)	
Operating Humidity	<90% RH (non-condensing)	
Operating Altitude	2000m	
Storage Altitude	12000m	
Protection Level	According to IEC60529, complies with IP65	
Drop Test	3m	

Safety Standards

CE Identification: EN61326: 2013 EN61326-2-2: 2013
Laser Safety Standard: EN60825-1: 1994+A2: 2001+A1: 2002

Product Features

Strong and Durable: Passed 3m drop test

Dustproof and Waterproof: Passed IP65 level dustproof and waterproof tests.

Ergonomic Design: Comfortable handheld, simple and convenient operation.

MAX/AVG/DIF/MIN: Can quickly display the maximum, minimum, average and difference value (between maximum and minimum) during measurement.

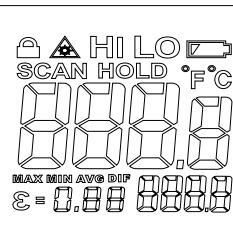
Large Backlight Screen: Large screen, bold fonts, and uniform white backlight combined makes it an attractive display.

Alarm Function: High and low temperature alarm is displayed with flashing LED and screen, to easily observe measurement results when alarm is triggered.

Dual Laser: ELIT IR35 uses dual wavelength laser indication to enhance measurement area accuracy.

Function Description

 
Icon	Temperature Measurement Lock Trigger
▲	Laser ON
HI LO	High and Low Limit Alarm
🔋	Low Battery
SCAN	Temperature Measurement Trigger
HOLD	Measurement Data Hold
°C	Unit
8888	Measurement Value on Main Display
MAX MIN AVG DIF	Mode
ε = 0.88	Emissivity
8888	Measurement Value on Secondary Display



Operations

Power On and Off

1. Gently pull the trigger to power on thermometer, LCD screen and white backlight will be on.
2. The thermometer will power off automatically without operation in 8s.



Manual Measurement

1. Pull and hold the trigger after aiming at the target. SCAN icon will be flashing indicating target object temperature is being measured.
2. Release trigger and SCAN icon disappears, HOLD icon appears, indicating measurement has stopped and the last measured value is kept.

 
Temperature Locking (Trigger Free Measurement)

1. During temperature locking, pull trigger to enable function. ▲ icon will appear on thermometer screen and SCAN icon flash. Thermometer keep continuous measurement target temperature, and backlight is auto off after 2 minutes.
2. Pull trigger again, ▲ and SCAN icons will disappear, HOLD icon will appear. Thermometer stop measurement and keeps the last measured value.

Note: During measurement, target must be larger than the light spot to ensure accuracy. Please refer to the D-S values.

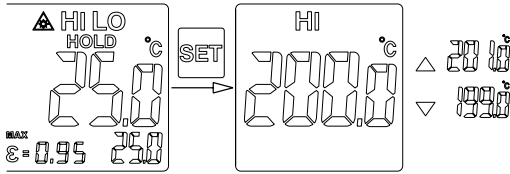
MAX/MIN/AVG/DIF Value Reading

Short press MODE button to change MAX/MIN/AVG/DIF modes respectively, temperature value of corresponding modes are shown in the secondary display area.

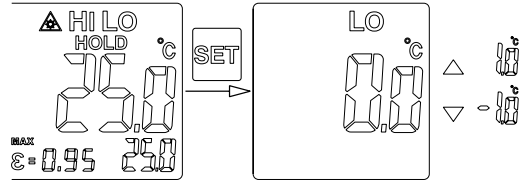


HIGH Alarm Limit Setup

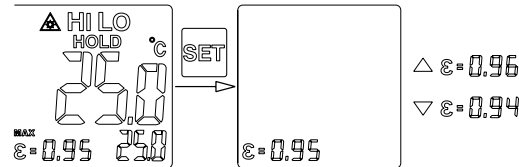
Short press SET button to enter HIGH alarm limit setup (as shown below), use up and down buttons to set values. Short press up or down buttons to add or subtract 1, long press up or down button to add or subtract 10. Device will exit limit setup after 5 seconds without any operation.

**LOW Alarm Limit Rang Setup**

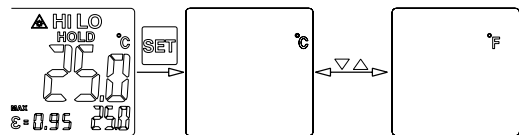
Short press SET button to enter LOW alarm limit setup. Please use HIGH alarm setup procedure to setup LOW alarm.

**Emissivity Setup**

 
ELIT IR35 emissivity can be adjusted from 0.01 to 1.0. Short press SET button to enter emissivity setup interface (as shown below). Use up and down function buttons to set values. Short press up button or down button to add or subtract 0.01 unit, long press up button or down button to add or subtract 0.1. Thermometer will exit setup after 5 seconds of no operation.

**Unit Setup**

 
Short press SET button to enter unit setup interface (as shown in the following figure), use up and down function buttons to change °C and °F units. Thermometer will exit setup after 5 seconds of no operation.

**Laser on or off Setup**

 
Short press SET button to enter laser on or off setup interface (as shown below), use up and down function buttons to open or close laser. Thermometer will exit setup after 5 seconds of no operation.

**Turn on or off Lock Measurement Setup**

Short press SET button to enter open or close lock measurement setup interface (as shown in the following figure), use up and down function buttons to open or close laser. Thermometer will exit setup after 5 seconds of no operation.

**Turn on or off High Limit and Low Limit Alarm Function**

 
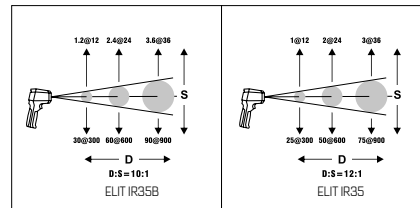
Short press HI/LO function button to open or close high limit and low limit alarm function in order. The order is: turn on HI/LO limit alarm at the same time -- turn off LO limit alarm function--turn off HI limit alarm function--turn off HI LO limit alarm functions--turn on HI LO limit alarm functions at the same time, and the cycle repeats.



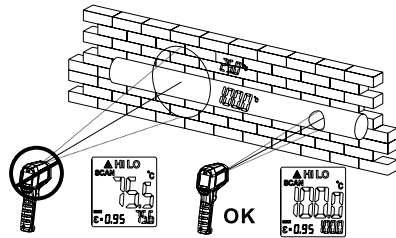
When the alarm function is on, alarm will go off when the temperature goes over the limit value. If measured temperature is higher than HI alarm limit, red LED and display will flash. If measured temperature is lower than LO alarm limit, blue LED and display will flash.

Find Heat Point and Cold Point

Aim at target area with thermometer, then move up and down slowly to sweep the whole area until the heat point and cold point are found.

**D:S (Distance Coefficient)****Visual Field**

Ensure that the target is larger than light spot. The smaller the target is, the closer is the measurement distance. Suggested measurement distance should be less than 75% of theoretical value.



Emissivity

Emissivity characterization reflects the of material's radiated energy. Emissivity for most organic materials, paints or oxidized surfaces are about 0.95. Total emissivity of selected metals and non-metals are listed in the following table.

Measured Surfaces	Emissivity
Metal	
Aluminum	
Oxidization	0.2-0.4
A3003 Alloy	
Oxidization	0.3
Rough	0.1-0.3
Brass	
Burnishing	0.3
Oxidization	0.5
Copper	
Oxidization	0.4-0.8
Electric Terminal Board	0.6
Hastelloy	
Alloy	0.3-0.8
Inconel	
Oxidization	0.7-0.95
Sand-Blasting	0.3-0.6
Electro Burnishing	0.15
Iron	
Oxidization	0.5-0.9
Rusting	0.5-0.7
Iron (Casting)	
Oxidization	0.6-0.95
Non-Oxidization	0.2
Casting	0.2-0.3
Iron (Forging)	
Passivation	0.9
Lead	
Rough	0.4
Oxidization	0.2-0.6
Molybdenum	
Oxidization	0.2-0.6
Nickel	
Oxidization	0.2-0.5
Platinum	
Black	0.9
Steel	
cold rolling	0.7-0.9
Steel Plate Burnishing	0.4-0.6
Steel Plate Rubbing	0.1
Zinc	
Oxidization	0.1

Non-Metal	
asbestos	0.95
asphalt	0.95
basalt	0.7
Carbon	
Non-Oxidization	0.8-0.9
Graphite	0.7-0.8
Silicon Carbide	0.9
ceramics	0.95
Clay	0.95
concrete	0.95
Cloth	0.9
Glass	
Convex Glass	0.76-0.8
Smooth Glass	0.92-0.94
Lead-Boron Glass	0.78-0.82
Plates	0.96
Stone Products	0.93
Plaster	0.8-0.95
Ice	0.98
Limestone	0.98
Paper	0.95
Plastics	0.95
Water	0.93
Soil	0.9-0.98
Wood	0.9-0.95

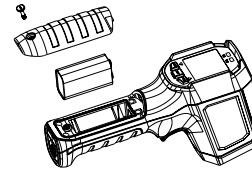
Maintenance

Clean

Use clean compressed air to blow away falling particles.
Use wet cotton swab to carefully wipe lens surface.
Use wet sponge or soft cloth to clean product exterior.

Battery Replacement

Install or replace 6F22 9V battery according to the following figure.





ELITAS
Hellenvegen 9
2022 GJERDRUM
NORWAY

ELITAS www.elit.no
Telephone : +47 63 93 88 80
E-mail: firmapost@elit.no

Innhold i denne manual kan forandres uten forvarsel
Vi tar forbehold om eventuelle trykkfeil